


Digital Entertainment Television is the superior TV delivery system for viewers tired of weather blackouts associated with satellite services or those who are under served by cable providers. With DET, you enjoy a world-class line-up of programming that includes HD along with sophisticated features like parental controls and a great interactive Electronic Program Guide. And better yet, it comes from a local company.

The Local Alternative

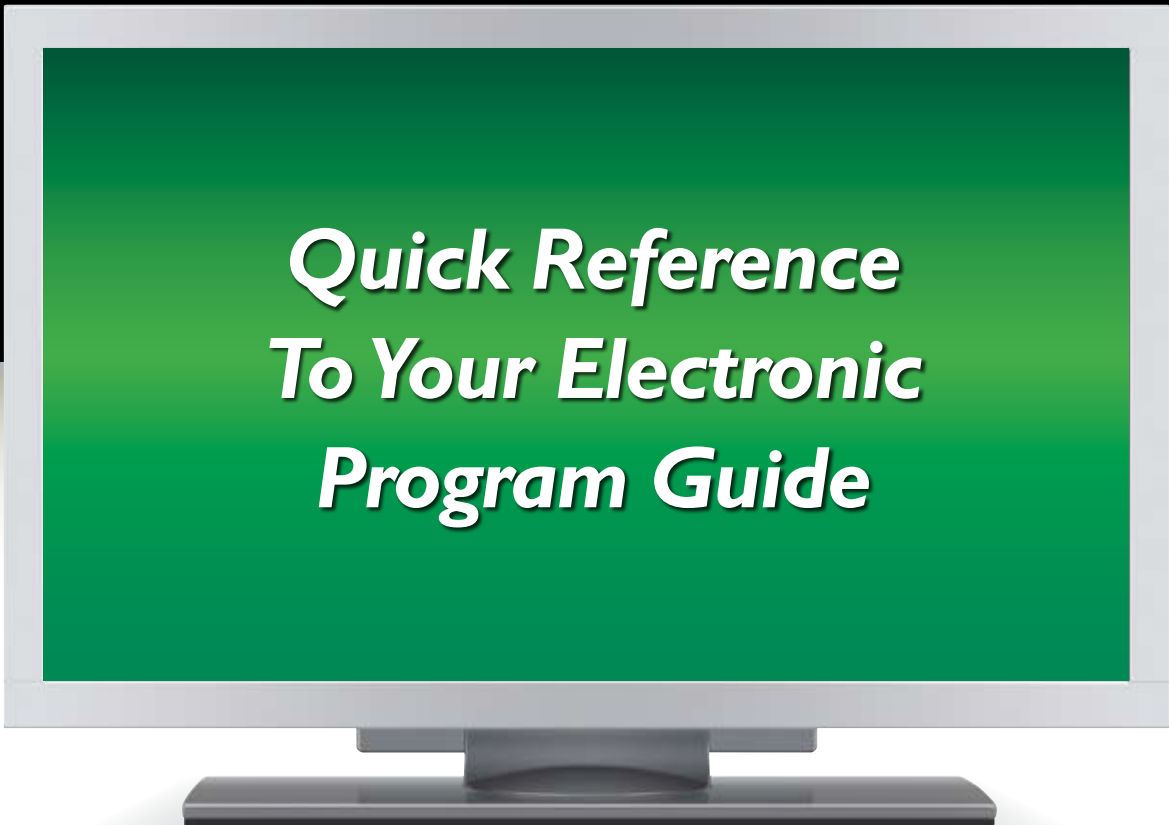

Welcome

This Quick Reference provides a brief introduction to the innovative new format used by our Electronic Program Guide, or EPG, which presents you with a new level of selection and convenience.

Inside these pages you'll find descriptions of the most commonly used areas of the EPG and how to access them including, the indispensable Main Guide, Zap Browser, Portal, and Parental Control features.

We know you'll enjoy the revolutionary new EPG and all the options it offers. Thank you for choosing Digital Entertainment Television!

Table of Contents

	Page
Main Guide	2
Zap Browser.....	3
Portal	4
Parental Controls	5



Using The Main Guide

The Main Guide is the typical way of accessing your television program schedule. In addition to displaying the titles and times of current and upcoming programs, the Main Guide offers a short description of any program title you highlight. There's even a convenient window that lets you watch programming while you are accessing schedule information.

To begin, press **"GUIDE"** to bring up the Main Guide. Press arrow buttons on your remote so that the program of your choice is highlighted in gold, then press **"OK"** or **"SEL/OPT"** for one of two options: VIEW NOW for a current program or SET TIMER to view the program when it becomes available. To scroll more quickly, use the **"Channel/Page Up"** or **"Channel/Page Down"** buttons on your remote. You can also use the numbers **"0-9"** on your remote to enter a specific channel number. Once selected, the Guide will highlight that channel.

Understanding The Main Guide

The top left portion of the Main Guide screen features a description of the program you are watching, along with its start and end time, the channel it's on and its rating. The top right of the Main Guide page is occupied by the Viewing Window, which allows you to continue viewing programs while using the Guide.

The bottom left column lets you arrow through the channel lineup and displays all current programs.

The bottom left column displays:

- Current Date
- Channel Numbers
- Abbreviated Channel Names
- Current Program Names

The bottom right column shows programs on the highlighted channel. Arrow down for same-day programs.

The bottom right column displays:

- Weekday and Date of the Schedule
- Program Start Times of the Schedule
- Program Names

Day Shifter

When you move the cursor inside the right column, the list will begin with the program currently airing. From this position, press the **"Up"** arrow on your remote to access the DAY SHIFTER, or press the **"LAST"** button on the remote to automatically highlight the DAY SHIFTER.

Once the current weekday/date is highlighted, press the **"Right"** arrow to advance a day. Each time you press the **"Right"** button, the schedule will advance another day. Use the **"Left"** arrow to go back a day.

While using the DAY SHIFTER, use the **"Down"** arrow to browse through the programs.

To return to the DAY SHIFTER feature from browsing the future program list, you can select the **"LAST"** button on your remote control.



Using the Zap Browser

The Zap Browser's revolutionary interface allows you to view programs full screen while accessing schedule information. Channel logos are prominently displayed to make it easier to learn channel lineups. This exciting, new way to access program information provides an alternative to the more typical Main Guide format.

From any program or channel, press **"Up"** or **"Down"** to bring up the Zap Browser. Then continue to press the **"Up"** or **"Down"** button to move the Zap Browser to the next or previous channel. Press the **"INFO"** button to access more information about the highlighted program. To exit INFO mode, press **"EXIT"** at any time.

In any active INFO mode you can press the **"Up"** and **"Down"** arrows to scroll through the channel lineup. This way, you may browse program titles on other channels while still watching a program in the background. You can also view program information, channel logos, the channel currently being viewed, the current time and day, and the Favorites List.

Press the **"Right"** arrow to preview information for the next program on your highlighted channel. Press the **"Up"** and **"Down"** arrows to scroll through the channel lineup for information on all programs in the next time slot. Press the **"Left"** arrow button to return to the current time slot.

While viewing program information, press **"SEL/OPT"**

or **"OK"** to select and tune to a program. If you select a program in the next time slot, your EPG will provide options for that program.

NOTE: You can use the Main Guide to set timers for future programs. With a timer set, your Set-Top Box will automatically tune to that program when it becomes available.

Use numbers **"0-9"** on your remote control to enter a specific channel number and the Zap Browser will move to that part of the channel lineup. Press **"SEL/OPT"** or **"OK"** to tune to a highlighted channel.





Portal

The Portal interface is a faster way to select your favorite type of programming. It automatically groups the channels in your lineup into categories, so whether you prefer sports, news, family, movies or another category, it's easy to locate the channels you view the most.

To access the PORTAL HOME from your remote press "**PORTAL**" or select "**MENU**" and arrow to the "**PORTAL**" option.

The PORTAL arranges the many different channels in the lineup into THEME CATEGORIES. Inside these THEME CATEGORIES are channel lineups of similar types of programming.

Press the arrows to highlight a THEME CATEGORY and press "**SEL/OPT**" or "**OK**" to open it.

Press the arrows to highlight a CHANNEL LOGO and press "**SEL/OPT**" or "**OK**" to view programming on that channel. Press "**SEL/OPT**" or "**OK**" again if you wish to tune to that channel.

To return to the PORTAL HOME scroll to the bottom of the screen, highlight and click on the "**PORTAL HOME**" button.



Parental Controls

With Parental Controls, you can limit access to any channel or rated program by selecting which channels or rated programs require entering the PIN-Code before it can be viewed. To use this feature, select “On” under “Parental Controls Status.” Select the channels you wish to block using Block Channels and block programs by their rating using Block Ratings.

Accessing Parental Controls

To access the PARENTAL CONTROLS screen, press “MENU.” Parental Controls are listed on this page.

Arrow down to highlight Parental Controls and press “SEL/OPT” or “OK.” You will be prompted to enter your PIN-Code.

Use numbers “0-9” on your remote, then highlight “ENTER” onscreen and press “SEL/OPT” or “OK.”

NOTE: The first time you set the PIN-Code, the numbers will appear in the TEXT WINDOW. The next time, the PIN-Code will appear as asterisks. You will need to remember your PIN-Code in order to access Parental Controls again.

Parental Control Options

Parental Control Status: Turns parent-controlled channels and rating blocks on or off.

Block Channels: Opens the CHANNEL BLOCK screen that lists all available channels. Use the arrow keys on your remote to highlight a channel and press “SEL/OPT” or “OK” to block the channel.

To see more channels while you are adding or removing channels to be blocked, use the “Page” buttons on the screen or the **Channel Up** or **Channel Down** buttons on your remote control. You can also use the numbers on your remote to directly jump to a channel while you are adding or removing channels to be blocked. Select “Done” on the screen.

Block Ratings: Opens the RATINGS BLOCK screen that lists all available program ratings. Use the arrow keys to highlight one rating, and press “SEL/OPT” or “OK” to block all programming that is rated that level and higher. Select “Done.”

Lock Set-Top Box Front Controls: By selecting this option you will block the digital Set-Top Box front panel buttons from functioning. For further information on this feature, contact your video provider.

Select “Done” on the screen to confirm Parental Control Status and return to the MENU FEATURES screen.

Setting a New PIN-Code

To change your PIN-Code, go to the MAIN MENU screen and select “System Settings.” Select “PIN-Code.” Enter your current “PIN-Code” and hit “Enter.” You will then be prompted to type in your new PIN-Code twice. After this has been successfully completed the screen will briefly display a “PIN Updated Successfully” message and you will automatically go back to the SYSTEM SETTINGS screen.