

NU-Telecom IPTV User Guide

(Entone Amulet Box - Aurelia)

How to program the remote for your TV and other devices

Your remote can be programmed to control your TV, DVD player, VCR, and other home theater systems. Determine the type of remote you are using and follow the direction below:

Entone Remote

1. Refer to the TV Code Guide that was provided to you by the NU-Telecom representative. Locate the code that matches the device that you want to control. If your device is not included on the list, you may still be able to program it by using the Auto-Search function that is explained on that same document.
2. Turn on the TV or device that you want to program.
3. Press the appropriate mode key once at the top of your remote (TV or AUX). The AUX key can be used to program a VCR, DVD player or other home theater device.
4. Press and hold the Setup button until the mode key flashes twice. You can now release the Setup button and the mode key should stay lit.
5. Enter the code that you found on the TV Code Guide by using the number pad on the remote.
6. If the code was entered correctly, the mode key will blink twice. If an incorrect code was entered, the mode key will blink seven times quickly.
7. Once the code is entered correctly, point the remote at the TV or device and press the Power button. The device should turn off. If it doesn't, repeat the above steps using a different code number.

Important Note: When using your remote control, you need to tell it what system it should be controlling by using the mode buttons at the top of the remote (STB, TV, AUX). For example, if you want to change the volume on the TV, you need to push the TV button and then use the volume control buttons. If you want to change the channel on the IPTV box, you need to push STB and then use the channel buttons.

How to turn your TV and other devices ON and OFF

1. You need to tell your remote what item you want to turn on / off. To do this, press either the **TV**, **STB**, or **AUX** button (The STB button is used to program the set-top box. The AUX button is used to program a VCR, DVD player or other home theater device)
2. Press the **ON** or **OFF** button

How to view the TV program schedule

1. Press **Guide** button on your remote control
2. Use the arrow keys to move through the schedule and press **OK** once you locate a show you want to watch.
3. Use the **CH+/CH-** buttons to page up and down in the guide
4. Press **Info** to see more detailed information about a selected program

How to use the Zap browser

The Zap browser allows you to access the program schedule while still watching your tv show in full screen.

1. While watching any program, press the up or down arrow keys to access the Zap browser.
2. Continue to use the arrow keys to scroll through the scheduling information.
3. The right and left arrows can be used to view scheduling information in the next time slot for a specific channel.
4. Press the **Info** button to access detailed information about a specific program.
5. Use the **Exit** button at any time to exit the info screen.
6. Once you find a program that you want to watch, press the **OK** button to tune to the desired channel.

How to use the Portal

The Portal is a quick and easy way to locate your favorite types of shows. It groups all TV channels into specific categories (sports, movies, news, music, etc...) so that it is easy for you to locate your favorite type of shows.

1. Press **Menu** and use the arrow keys to select **Portal** to access this feature.
2. Use the arrow keys to highlight a category that you prefer and press the **OK** button.
3. Use the arrow keys to highlight a channel within the selected category and press **OK** to view programming on that channel. Press the **OK** button again if you want to tune into that channel.

Parental controls

How to set your PIN for the first time

1. Press **Menu**
2. Use the arrow keys to select **Parental Controls**, and press **OK**
3. Enter your PIN. (The PIN will show up as numbers on your screen the first time you enter it. It will show up as asterisks for all future entries. You will need to remember this code to access Parental Controls again.)
4. Highlight Enter on your screen and press the **OK** button

How to set parental controls

1. Press **Menu**
2. Use the arrow keys to select **Parental Controls**, and press **OK**
3. Enter your PIN
4. Use the arrow keys to select the parental block option that you desire:
 - a. Parental Control Status (Select On or Off)
 - b. Block Channels (Use the arrow keys to select channels that you want to block)
 - c. Block Ratings (Use the arrow keys to select the rating that you want to block)

How to change your PIN code

1. Press **Menu**
2. Select **System Settings**
3. Select **PIN Code**
4. Enter your current **PIN** and select **Enter**
5. Type your new **PIN**
6. You will be asked to enter the new **PIN** again to confirm.
7. You will receive a confirmation screen when the PIN has been successfully changed.

Favorites List

1. Press the **FAV+** button to access the Favorites menu
2. Follow the instructions on screen to either view or edit a favorites menu. You can have up to eight different favorites lists.

Timers

1. Press Menu
2. Select Timers
3. Follow the on-screen instructions of how to set different timers on your tv.